

# Information displays

---

## PERSONALISED SETTINGS

### Car Setup menu

**Note:** For road safety reasons, changes in the **Car Setup** menu can only be made while the vehicle is stationary. If this menu or one of its sub-menus is open when the vehicle begins to move, the information display will automatically exit the **Car Setup** menu.

Use the rotary control to scroll through the displays and press **SET/RESET** to choose a sub-menu and adjust the settings.

Scroll to the **Car Setup** display using the rotary control and press the **SET/RESET** button.

### EHPAS personalisation

**Note:** When the vehicle is stationary, the steering assistance is optimized in all three settings and does not differ noticeably.

**Standard:** The standard setting suitable for all driving styles.

**Sport:** The steering assistance is reduced. This suits a sportier driving style by increasing the feedback through the steering wheel. The sport setting is also an advantage when driving on icy and snowy road conditions.

**Comfort:** The steering assistance is increased. The steering will feel lighter and you will not need to exert as much force on the wheel.

### ESP

Select this option to activate ESP.

### Language setting

A choice of eleven languages are available.

Scroll to this display using the rotary control and press the **SET/RESET** button to select the desired language. Turn the rotary control to save the setting and exit the menu.

### Clock setting

**Note:** This display is only present on vehicles equipped with a programmable auxiliary heater but no Ford audio or navigation system. If the vehicle is equipped with a Ford audio or navigation system, the time is set on the audio or navigation system. See separate audio or navigation handbook.

Scroll to this display using the rotary control and press **SET/RESET**. The hours start to flash and can be set using the rotary control.

Press the **SET/RESET** button to confirm the setting and move to the minutes.

Proceed in the same way to set the minutes and the date.

After setting the year and pressing **SET/RESET**, the time and date are stored.

### Units of measure

To toggle between metric and imperial units, scroll to this display and press the **SET/RESET** button.

Toggling the units of measure using this display will affect the following displays:

- Distance to empty
- Average fuel consumption
- Instantaneous fuel consumption
- Average speed
- Outside air temperature
- The temperature display in the automatic climate control.